





Assembly Instructions

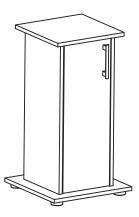

Item 36603

15 ¾" Wide, 15 ¾" Deep, 28 ¾" High

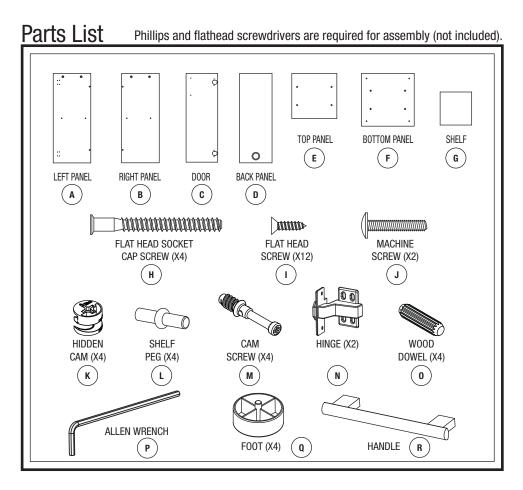


STEP 1

Using a Phillips screwdriver, turn four CAM SCREWS (Item M) into the TOP PANEL (Item E).

۵




Fasten two HINGES (Item N) to DOOR (Item C) and LEFT PANEL (Item A). Use twelve FLAT HEAD SCREWS (Item I). Hinges may be loosened and readjusted as needed. Fasten HANDLE (Item R) to DOOR (Item C) using two MACHINE SCREWS (Item J).

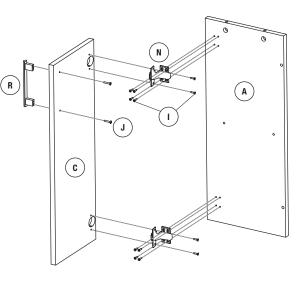

STEP 3


Insert four WOOD DOWELS (Item 0) into BACK PANEL (Item D). Fasten LEFT PANEL (Item A) and RIGHT PANEL (Item B) to BACK PANEL (Item D) with WOOD DOWELS (Item 0).

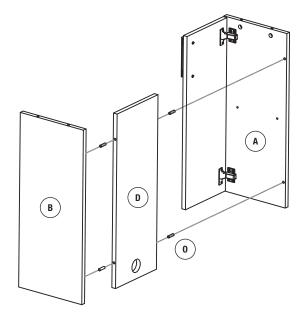


STEP 4

Push four HIDDEN CAMS (Item K) into the center holes of LEFT and RIGHT PANELS (Items A and B) with the arrows pointed in the direction pictured below. Push four SHELF PEGS (Item L) into the center holes of LEFT and RIGHT PANELS (Items A and B).


(DOOR and HINGES have been removed from image for clarity.)

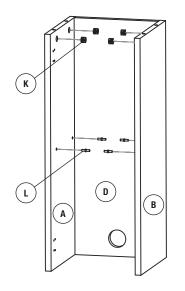


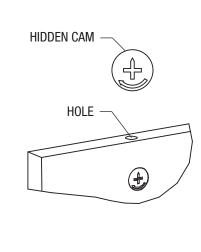



Place TOP PANEL CAM SCREWS (Items E and M) into the holes of both PANELS (Items A and B). Using a flathead screwdriver, tighten the HIDDEN CAMS (Item K) by turning them clockwise until the curved arrows are aligned with the top edge of the panels as shown in picture 2 below. If door is misaligned, loosen and adjust FLAT HEAD SCREWS (Item I) attached to HINGES (Item N). When door is properly aligned, re-tighten hinge screws.

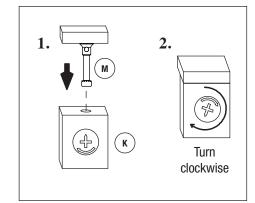


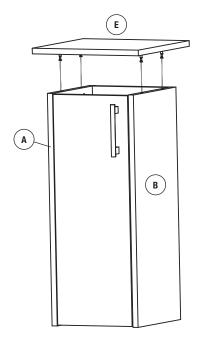




STEP 6

Carefully turn stand upside down. Attach BOTTOM PANEL (Item F) to SIDE PANELS (Items A and B) with four FLAT HEAD SOCKET CAP SCREWS (Item H) using ALLEN WRENCH (Item P). Press four FEET (Item Q) into BOTTOM PANEL (Item F). Turn stand back over.

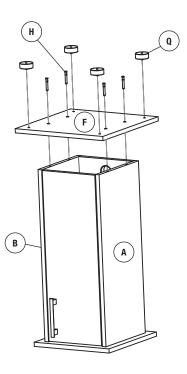

STEP 7

Insert SHELF (Item G) onto four SHELF PEGS (Item L). (DOOR and HINGES have been removed from image for clarity.)

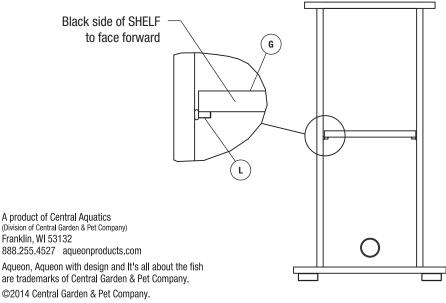

Made in China