



Owner's Manual

- Under Rim LED Accent Light
- Under Rim LED Add-On Lamp



Please read these instructions in their entirety before attempting to use this product.

IMPORTANT SAFETY INSTRUCTIONS

WARNING – To guard against injury, basic safety precautions should be observed including the following:

1. READ AND FOLLOW ALL SAFETY INSTRUCTIONS

2. **DANGER** – To avoid possible electric shock, special care should be taken since water is employed in the use of aquarium equipment. For each of the following situations, do not attempt to repair yourself; return the appliance to an authorized service facility for service or discard the appliance:

A. If the appliance falls into the water, DON'T reach for it! First unplug it and then retrieve it.

If electrical components of the appliance get wet, unplug the appliance completely.

B. Carefully examine the appliance after installation. It should not be plugged in if there is water on the parts not intended to be wet.

C. Do not operate any appliance if it has a damaged cord or plug, or if it is malfunctioning, or if it is dropped or damaged in any manner.

D. To avoid the possibility of the appliance plug or receptacle getting wet, position aquarium stand and tank to one side of the wall-mounted receptacle to prevent water from dripping onto the receptacle or plug. As shown in the figure, a "drip loop" should be arranged by the user for each cord connecting an aquarium appliance to the receptacle. The "drip loop" is the part of the cord below the level of the receptacle, or the connector if an extension cord is used, to prevent water travel along the cord and coming in contact with the receptacle. If the plug or the receptacle does get wet, DON'T unplug the cord. Disconnect the fuse to the circuit breaker that supplies power to the appliance. Then unplug and examine for the presence of water in the receptacle.

3. Close supervision is necessary when any appliance is used by or near children.

4. To avoid injury, do not contact moving parts or hot parts such as heaters, reflectors, lamp bulbs, etc.

5. Always unplug an appliance from the outlet when not in use, before putting on or taking off parts, and before cleaning. Never yank the cord to pull plug from the outlet. Grasp the plug and pull to disconnect.

6. Do not use an appliance for other than intended use. The use of attachments not recommended or sold by the appliance manufacturer may cause an unsafe condition.

7. Do not install or store the appliance where it will be exposed to the weather or to temperatures below freezing.

8. Make sure an appliance mounted on a tank is securely installed before operating it.

9. Read and observe all the important notices on the appliance.


10. If an extension cord is necessary, a cord with a proper rating should be used. A cord rated for less amperes or watts than the appliance rating may overheat. Care should be taken to arrange the cord so that it will not be tripped over or pulled.

11. This appliance is recommended for use over a glass aquarium cover or panel. The appliance is intended **FOR HOUSEHOLD USE ONLY**.


ONLY FOR POLARIZED ATTACHMENT PLUG APPLIANCES

12. If this appliance has a polarized plug (one blade is wider than the other) as a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not attempt to defeat this safety feature.

13. SAVE THESE INSTRUCTIONS

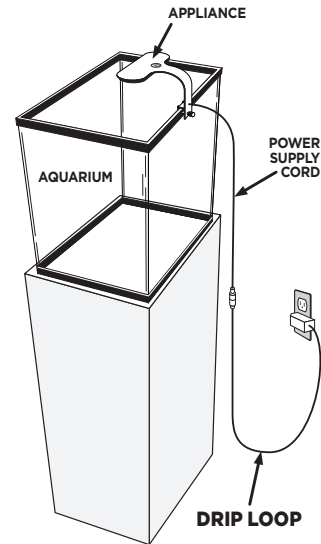

Parts Diagram

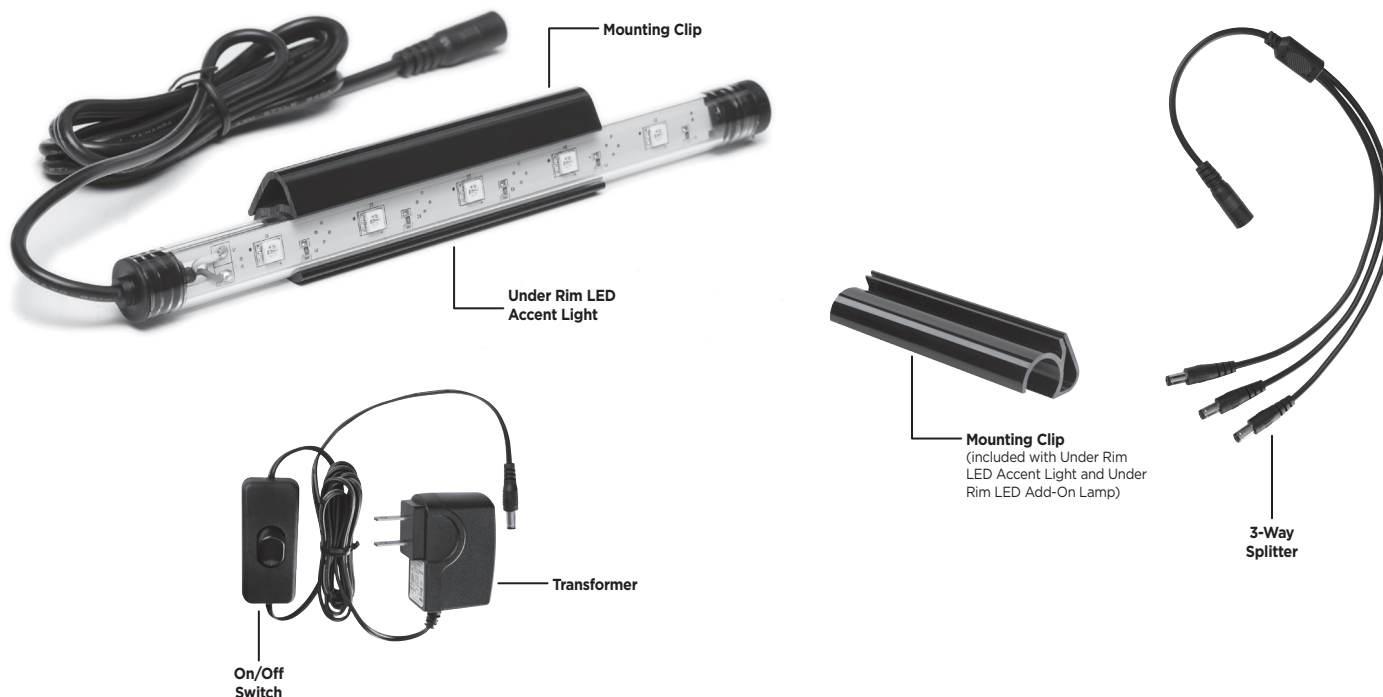

Instructions

Under Rim LED Accent Light *(base light)*

WATER RESISTANT - DO NOT FULLY SUBMERGE

1. Attach mounting clip to the Under Rim LED Accent Light.
2. Attach the mounting clip to the inside lip of the aquarium frame at the back of the aquarium. Rotate the lamp so LEDs are aiming downward towards the center of the aquarium.
3. Route the light power cord out the back of the aquarium and connect the transformer to the cord.
4. Plug the transformer into an acceptable outlet. Be sure to incorporate a "drip loop" as instructed in the safety information.
5. Turn on using on/off switch.



Under Rim LED Add-On Lamp

Add up to two Add-On Lamps to a base light

WATER RESISTANT - DO NOT FULLY SUBMERGE

1. Turn off and unplug the Under Rim LED Accent Light.
2. Disconnect the LED light power cord from the transformer and plug the 3-way splitter into the transformer.
3. Attach a mounting clip to the Under Rim LED Add-On Lamp.
4. Attached mounting clip(s) to the inside lip at the back of the aquarium; rotate each light so each lamp is aiming downwards towards the center of the aquarium
5. Route the power cord for each light out the back of the aquarium and connect each cord to the connector of the 3-way splitter.
6. Plug the transformer into an acceptable outlet. Be sure to incorporate a "drip loop" as described in the safety instructions.
7. Turn on using on/off switch

Aquarium	Length	Recommended Number of Lights
10 Gallon	20"	1
20 Gallon	24"	1 or 2
29 Gallon	30"	1 or 2
30 Gallon, 40 BR	36"	2 or 3
55, 75, 90 Gallon	48"	3

90 Day Limited Warranty

WHAT THE WARRANTY COVERS:

Central Aquatics (Company) warrants this Aqueon® product (see Exclusions below) to the original purchaser against defective material and workmanship that occurs during normal in-home use for 90 days. Company will, at Company's option, either repair or replace same without charge (but no cash refunds will be made). This warranty is limited to replacement or repair of product only and does not cover loss of aquarium life, personal injury, property loss, or damage arising from the use of the product.

EXCLUSIONS:

1. Damage resulting from accident, misuse, abuse, lack of reasonable care, subjecting the product to any but the specified electrical service, other than normal and ordinary use of the product, subjecting the product to abnormal working conditions or any other failure not resulting from defects in materials or workmanship.
2. Damage resulting from modification, tampering with or attempted repair by anyone other than the Company.
3. Transfer of product to someone other than the original consumer purchaser.

FOR WARRANTY OR TECHNICAL SERVICE:

1. Contact the Company by mail or telephone to obtain a return authorization number:
Central Aquatics
5401 West Oakwood Park Drive
Franklin, WI 53132
Telephone: (888) 255-4527

NOTE: Be sure to provide contact information when requesting return authorization number.

2. Deliver, mail or ship the product, together with a copy of the original bill of sale, to:
Central Aquatics
5401 West Oakwood Park Drive
Franklin, WI 53132

You must pay any postage, shipping charges, insurance costs and other expenses to return the product along with the original cash register receipt to Central Aquatics. However, if the necessary repairs are covered by the warranty, Company will pay the return shipping charges to any destination within the United States or Canada.

LIMITATION OF IMPLIED WARRANTIES AND EXCLUSION OF CERTAIN DAMAGES:

THE COMPANY DISCLAIMS LIABILITY FOR INCIDENTAL AND CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, WITH RESPECT TO THIS PRODUCT. THIS WRITING CONSTITUTES THE ENTIRE AGREEMENT OF THE PARTIES WITH RESPECT TO THE SUBJECT MATTER HEREOF; NO WAIVER OR AMENDMENT SHALL BE VALID UNLESS IN WRITING SIGNED BY THE COMPANY. Some states do not allow the exclusion or limitation of consequential damages, so the above limitation or exclusion may not apply to you.